

SpecToolV2

Connection to EIS222



1.EZS Area Outs to EIS222





EZS 40PIN	EZS Area 37PIN
1	31
2	21
3	23
4	27
5	8
6	6
7	14
8	12
9	2
10	4
11	33
12	20
13	25
14	29
15	
16	
17	15
18	
19	
20	9
21	26
22	
23	
24	

25	22
26	
27	
28	
29	19
30	17
31	28
32	
33	
34	
35	24
36	
37	
38	
39	35
40	37

