


# SpecToolV2


## Connection Engine Area with PCB CPC Ecu Adapter



+

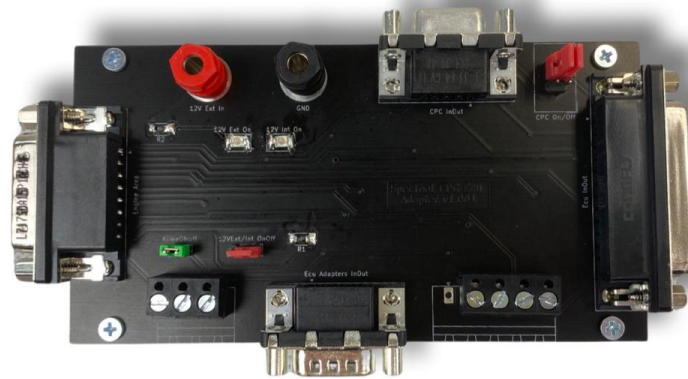

=

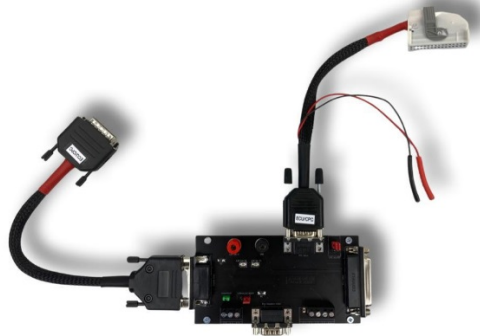

## 1. Mbox2 Engine Area to Pcb Cpc Adapter Connection Cable



- Pinout Cabel

In	Out
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15


## 2. CPC Control Unit connection cable



- Pinout Cabel

D-Sub 9	CPC Unit
1	26
2	10
3	28
4	12
5	18
6	29
7	13
8	27
9	11
5 - 12V	C3
Case GND	C4


In 32pin CPC plug

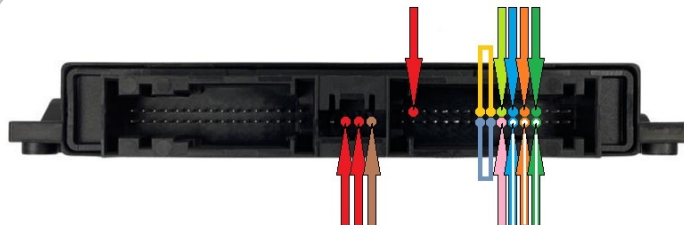



Pin 8 to 9 Bridge

Pin 24 to 25 Bridge

### 3.Engine Area Port


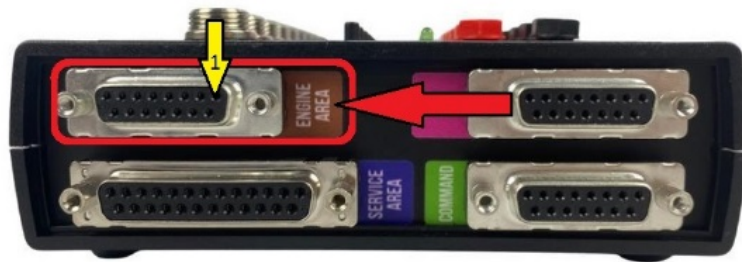


### 4. Diagnostic ECU with CPC Unit Jumpers in this position

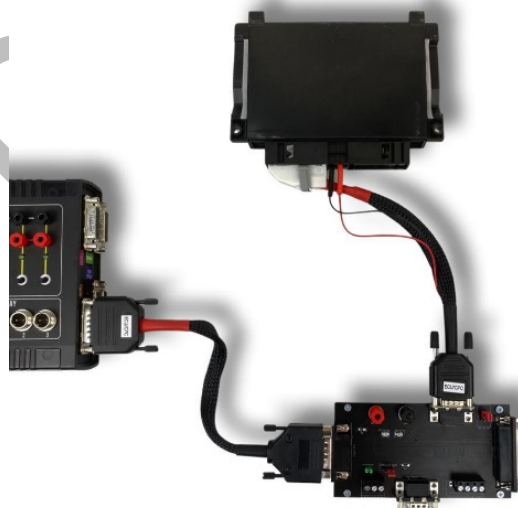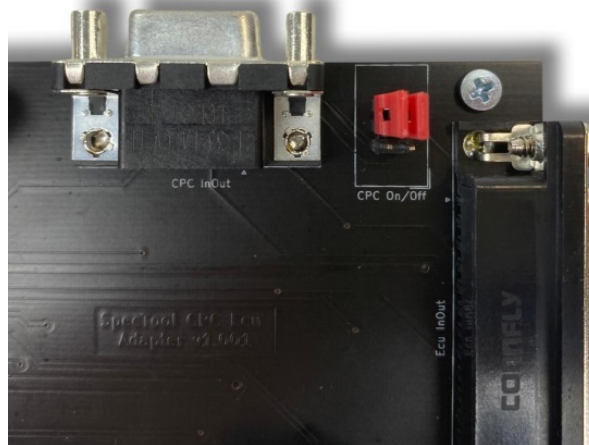


## 5. Diagnostic ECU without CPC Unit (W117, W176, X156, W246)

Jumpers in this position

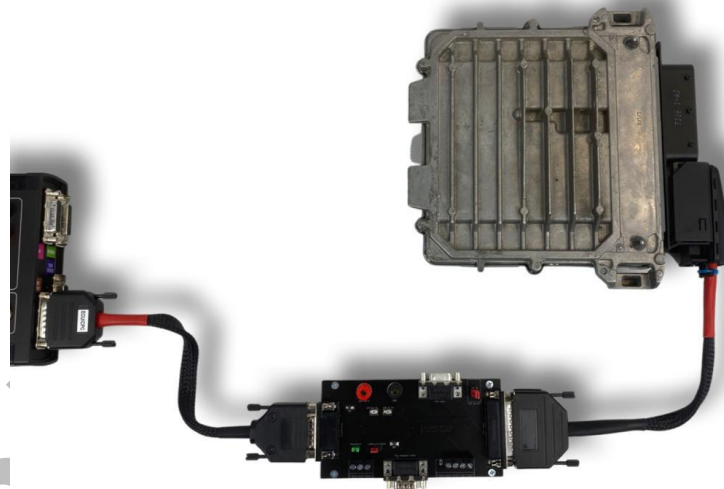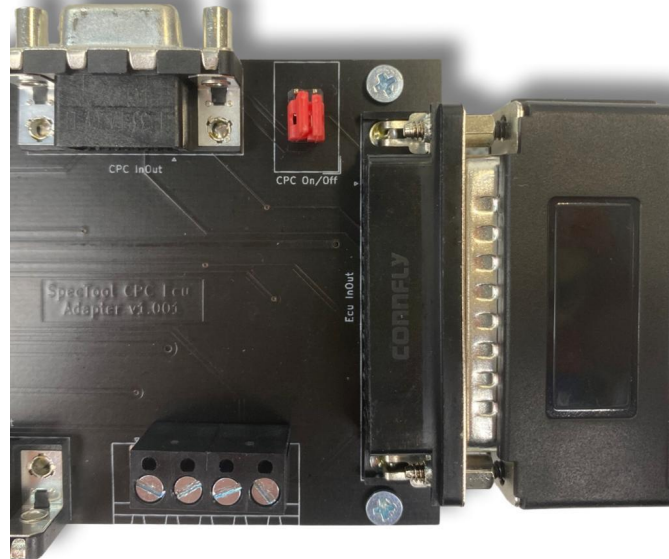


## 6.Externa Power 12V option


- Internal 12V Power Jumper Position

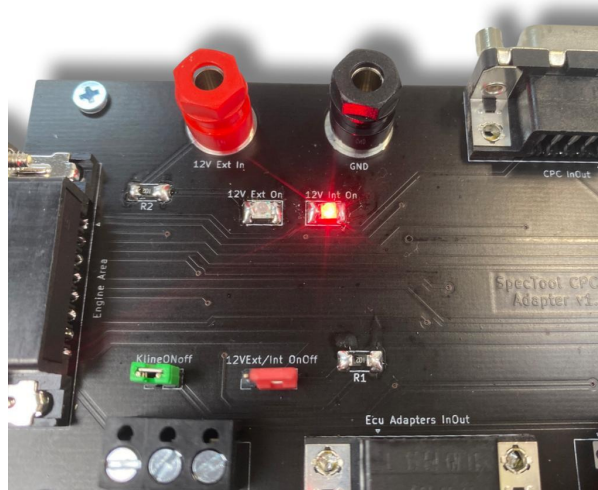

- External 12V Power Jumper Position

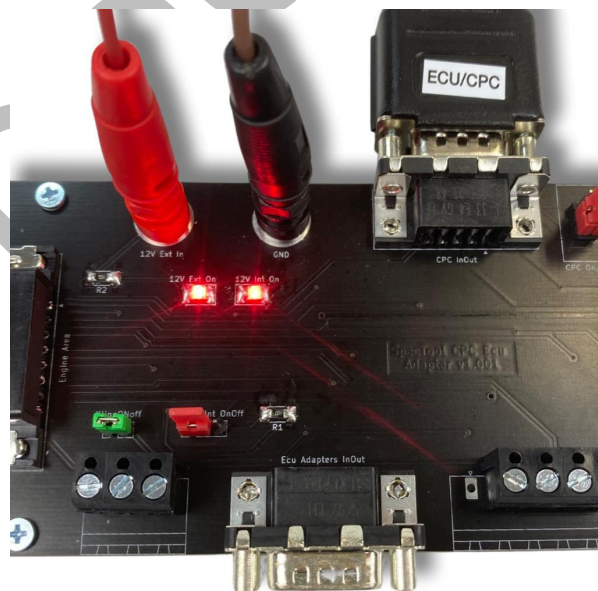

## 7. Dsub 25 Pinout

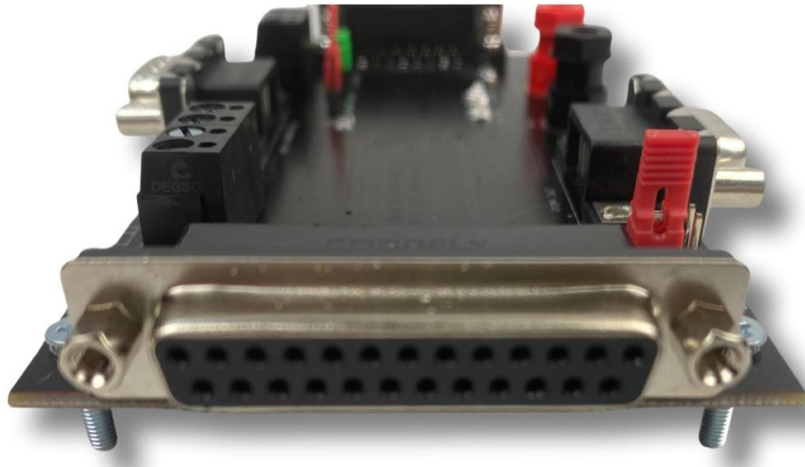

D-Sub 25	
2	12V
3	12V
5	12V
13	GND
14	Green Can H
16	Blue Can H
17	Blue Can L
19	Pink Can L
21	Pink Can H
24	Green Can L

## 8. 58pin Ecu Plug



D-Sub 25	ECU PLUG
2	15
3	16
5	5
13	2
14	41
16	42
17	55
19	-
21	-
24	54



## 9. MRG1 and MRD1 Ecu Plug



D-Sub 25	ECU PLUG
2	7
3	3
5	26
13	2
14	28
16	25
17	24
19	23
21	22
24	27

## 10. SID3xx Ecu Plug



D-Sub 25	ECU PLUG
2	
3	G1
5	D1
13	H4
14	A4
16	
17	
19	
21	
24	A3