

# SpecToolV2

## Connection to W447 With Manual Gearbox




- 1.EZS Area Outs to EZS W447
- 2.IC Area Outs to W447 Vito Dashboard
- 3.Service Area Outs to ESL W447 FBS4

## 1.EZS Area Outs to EZS W447




EZS 12PIN	EZS Area 37PIN
1	2
2	4
3	8
4	6
5	15
6	37
7	
8	19
9	12
10	14
11	17
12	35

## 2.IC Area Outs to W447 Vito Dashboard

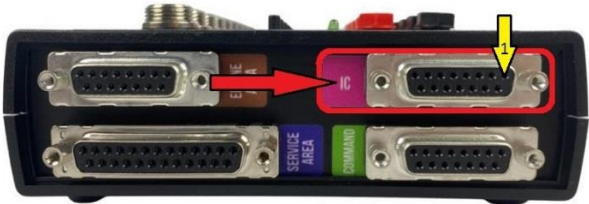

IC 18PIN	IC Area 15PIN
1	7
4	8
12	9
13	11
17	1
18	14

### 3. Service Area Outs to ESL W447 FBS4

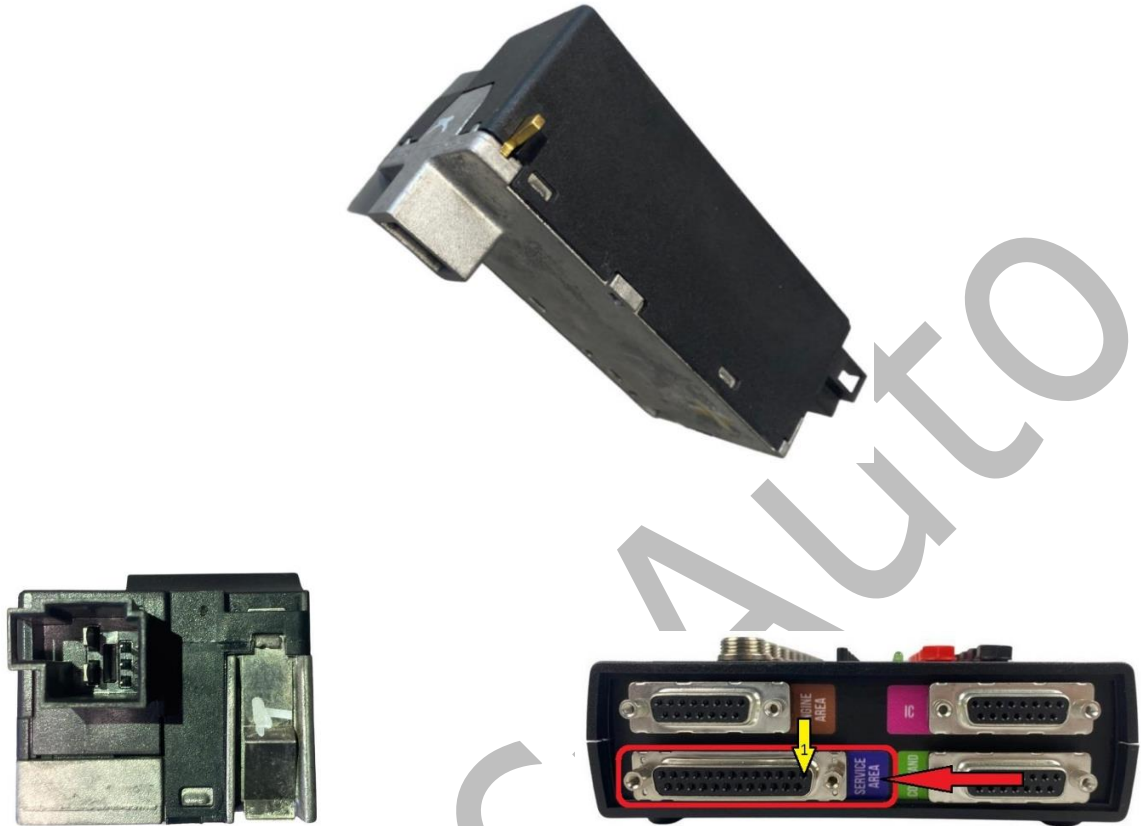

ELV 5PIN	Service Area 25PIN
2	11
4	13
5	12